


Cruise Control

A/T Gear Position Switch Test

1. Disconnect the 10P connector from the A/T gear position switch.
2. Check for continuity between the terminals in each position according to the table and confirm that there is continuity only in positions **2**, **D₃**, and **D₄**.


Terminal	8	9
Position		
1		
2	○	○
D₃	○	○
D₄	○	○
N		
R		
P		

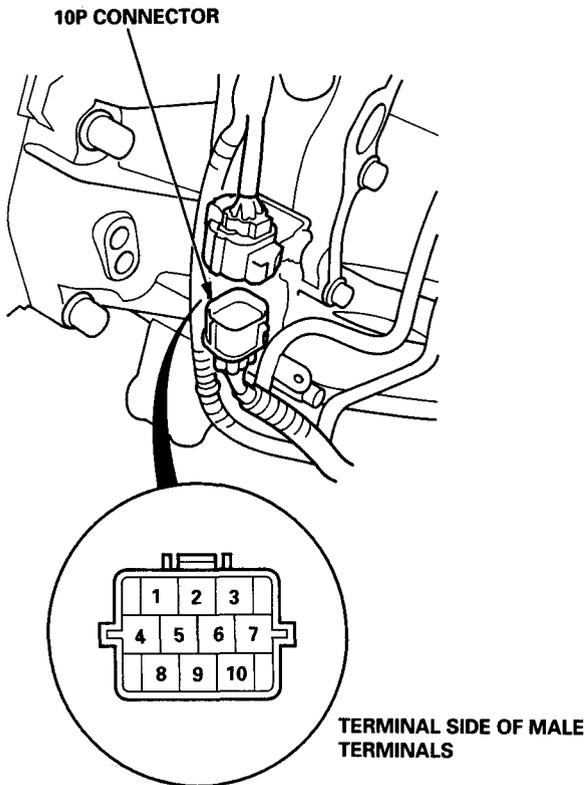

3. If necessary, replace the A/T gear position switch.

Actuator Solenoid Test

1. Disconnect the 4P connector from the actuator.

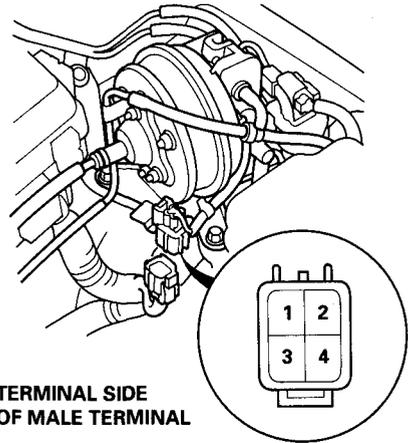

2. Check for resistance between the terminals according to the table.

Terminal	1	2	3	4
Resistance (Ω)				
VENT SOLENOID 40-60 Ω			○	○
VACUUM SOLENOID 30-50 Ω		○	○	○
SAFETY SOLENOID 40-60 Ω	○			○

NOTE: Resistance will vary slightly with temperature; specified resistance is at 70°F (20°C).

